



DP-20 PLUS WEB GUIDE CONTROLLER INSTALLATION INSTRUCTIONS



DP-20 PLUS

Installation Instructions

Table of Contents

1	DP-20 PLUS PANEL MOUNT	3
2	DP-20 PLUS WALL MOUNT BRACKETS	4
2.1	Wall Mount Bracket Installation	5
2.2	DP-30 to DP-20 PLUS Mounting Bracket	6
3	SPECIFICATIONS	7
	Inputs and Outputs	7
	Certifications and Compatibility with Industrial Environments	8
	Maximum Cable Lengths	8
4	SERVICE	9

Table of Figures

Figure 1	- DP-20 PLUS Front and Side Views (Panel Mount shown with 90° connector option)	3
Figure 2	- DP-20 PLUS Rear View (Panel Mount).....	3
Figure 3	- DP-20 PLUS Wall Mount Bracket Dimensions (Part Number 69139-001).....	4
Figure 4	- Wall Mount Bracket (Rear and Bottom Views)	5
Figure 5	- DP30 to DP-20 PLUS Bracket (Part Number 69631-001).....	6

DP-20 PLUS

Installation Instructions

1 DP-20 PLUS Panel Mount

- 1) Prior to installing, remove Holding Screws and Slide Bars (2) and place DP-20 into metal cutout. Use dimensions in Figures 1 and 2 for cutout.
- 2) After placement in cutout, re-install Slide Bars and Holding Screws. Tighten Holding Screws until the DP-20 is secure in the panel.
- 3) NOTE: All dimensions and specifications are in mm [inches] unless specified otherwise.

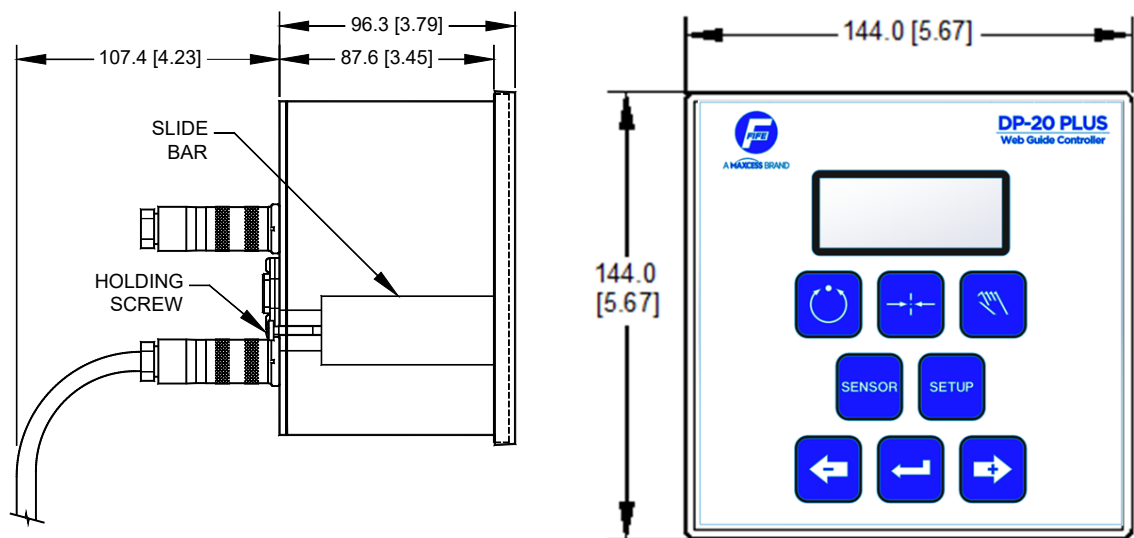


Figure 1 - DP-20 PLUS Front and Side Views (Panel Mount shown with 90° connector option)

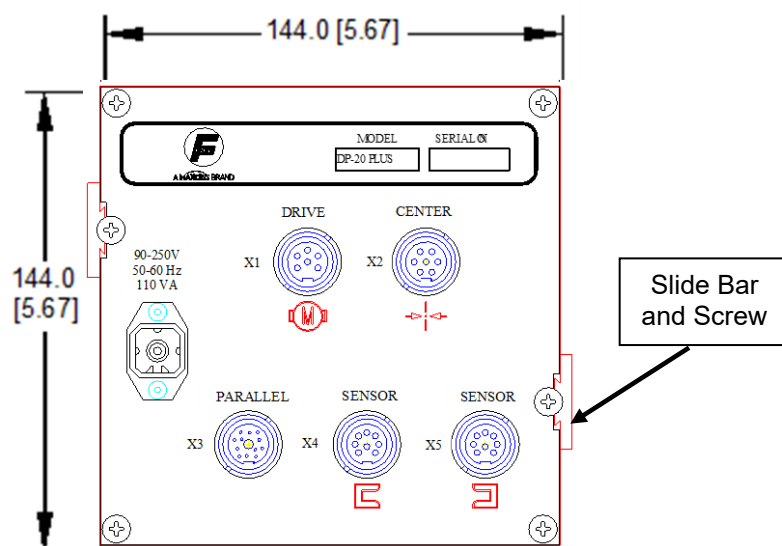


Figure 2 - DP-20 PLUS Rear View (Panel Mount)

DP-20 PLUS

Installation Instructions

2 DP-20 PLUS Wall Mount Brackets

The wall mount bracket dimensions for new DP-20 PLUS users are provided below in Figure 3. Bracket Part Number is 69139-001. The bracket dimensions and Part Number for clients transitioning from DP-30 to DP-20 PLUS are provided in Figure 5.:

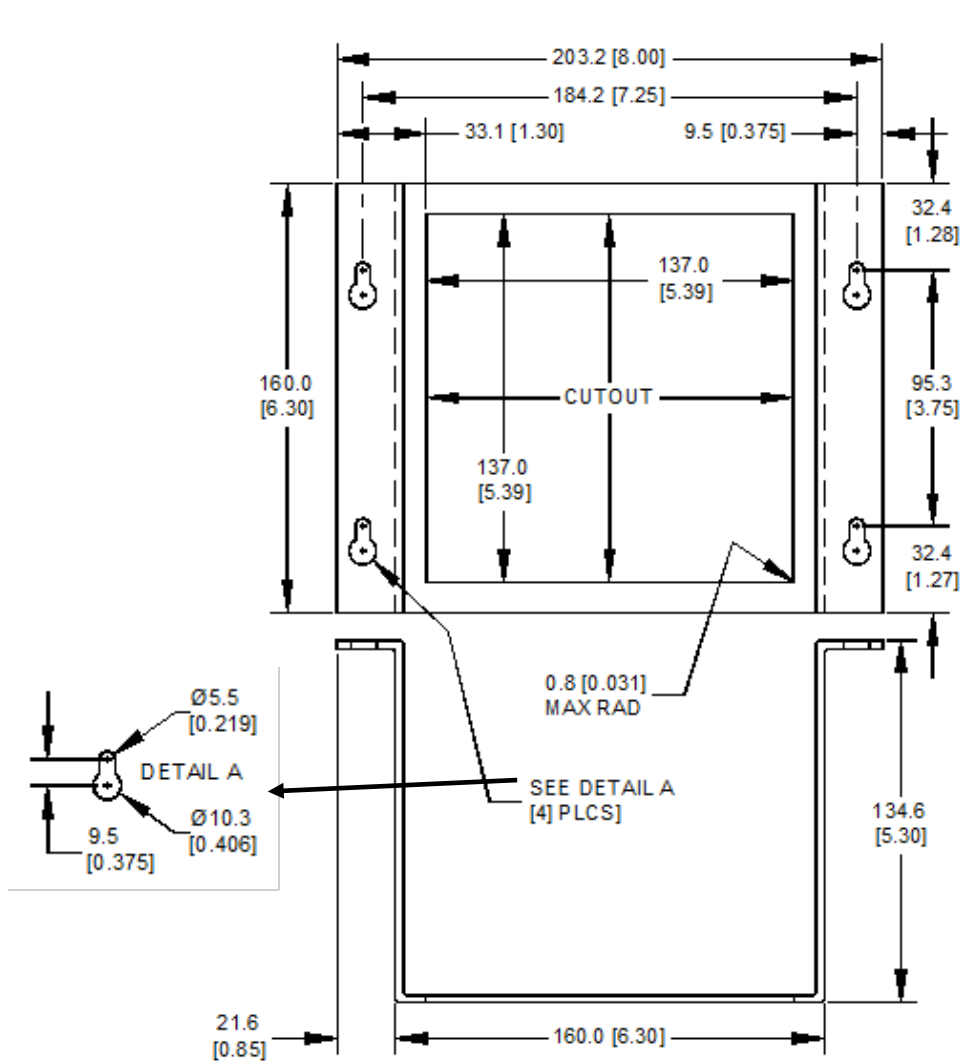


Figure 3 - DP-20 PLUS Wall Mount Bracket Dimensions (Part Number 69139-001)

DP-20 PLUS

Installation Instructions

2.1 Wall Mount Bracket Installation

- 1) Prior to installing remove Holding Screws and Slide Bars and place DP-20 into applicable bracket.
- 2) After placement re-install Slide Bars and Holding Screws. Tighten Holding Screws until the DP-20 is secure in the bracket.

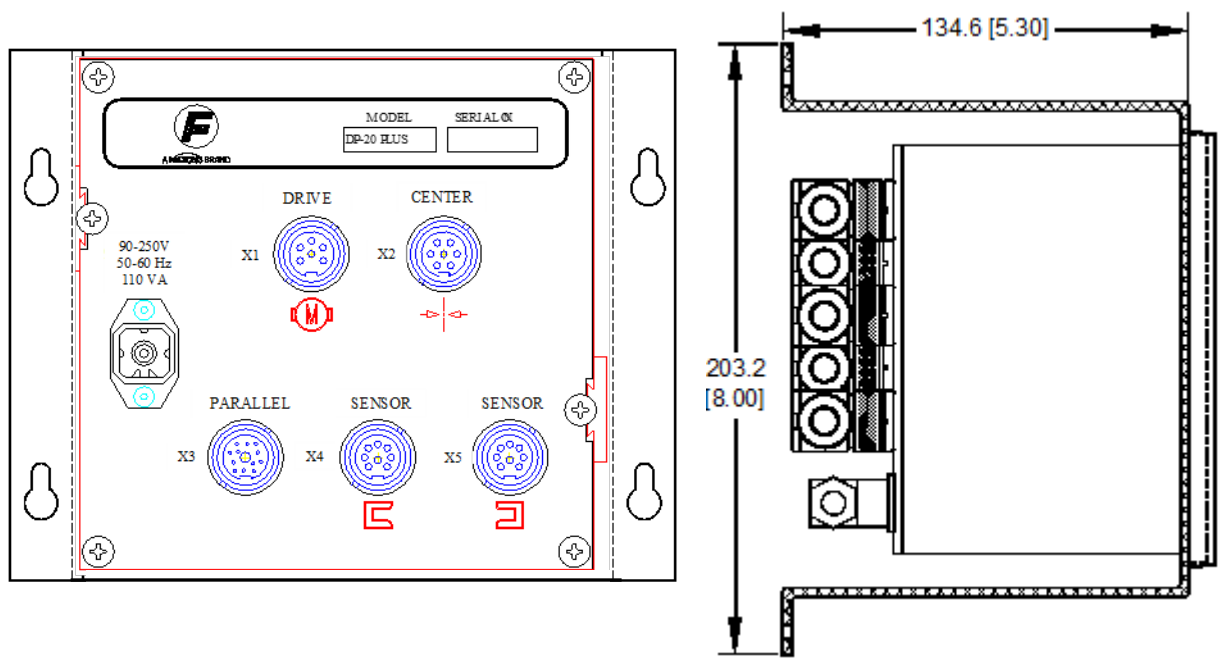


Figure 4 – Wall Mount Bracket (Rear and Bottom Views)

NOTE – Wall mount bracket shown with and without 90° connectors.

DP-20 PLUS Installation Instructions

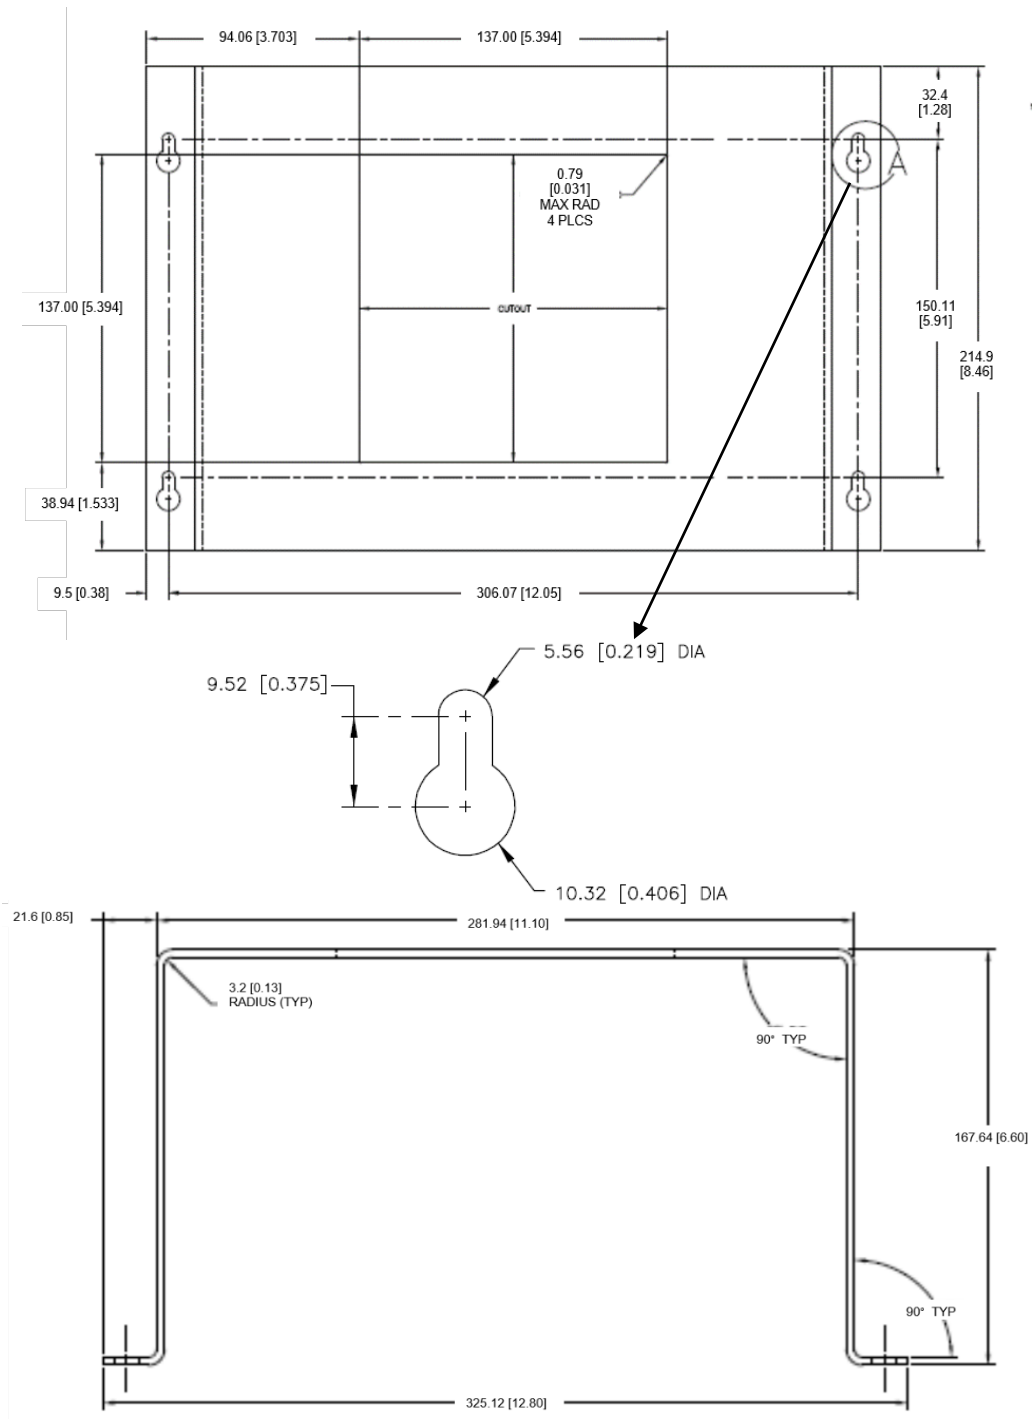


Figure 5 - DP30 to DP-20 PLUS Bracket (Part Number 69631-001)

2.2 DP-30 to DP-20 PLUS Mounting Bracket

This bracket (Part No. 69631-001) can be ordered by customers who are transitioning from DP-30 to DP-20 PLUS.

DP-20 PLUS

Installation Instructions

3 Specifications

General

Universal Input Line Voltage Range	- 90 VAC To 250 VAC
Input Line Frequency	- 50 To 60 Hz
Power consumption	- 180 VA
Operating Ambient Temp.	- 0° to 50°C (32° to 122°F)
Dimensions	- Height 144 mm (5.67") Width 144 mm (5.67") Depth 103 mm (4.06") (without cables attached)
Approximate Weight	- 1.6 Kg (3.5 lbs)

Inputs and Outputs

Electromechanical Actuator	- 3.5 A, 46 V maximum
Hydraulic Servo Valve	- ± 50 mA With or without Lockout Valve (Max 39 W at 24 V or 48 V)
MPA (with MPA Lockout Signal)	- ± 10 mA
Servo Center	- Analog Inductive type
Sensor Input (2) Individually Programmable	- Max Input ± 20 mA 0 to 10 mA (Preferred)
Parallel port	- Six Digital Inputs Low Level: 0 – 0.9 V High level: 4.6 – 24 V, max 6 mA Two open collector outputs connected to ground, max 30 V (NPN open collector) 55 mA at 1.6 V Switchable Logic Polarity +12V / +15V available to port for input reference
Supply to Sensors	+12V or +15V $\pm 5\%$, 600 mA (+15V only for legacy FNA sensors) See Quick Start Guide
Supply to Accessories	-12V $\pm 5\%$, 100 mA



DP-20 PLUS

Installation Instructions

Certifications and Compatibility with Industrial Environments

Product Certification	-	CE UL/CSA/IEC 61010-1
Protection Class	-	Designed to meet IP 54
Industrial Environments		Indoor Use Altitude <2000 Meters Relative Humidity up to 95% Pollution Degree 2

Maximum Cable Lengths

Sensors (Except SE-26A)	-	50 m (165 ft)
SE-26A Sensor (SE-26 is not supported)	-	25 m (82 ft)
Parallel Port	-	50 m (165 ft)
Servo-Center	-	50 m (165 ft)
Servo Valve	-	50 m (165 ft)
Lockout Valve	-	50 m (165 ft)
Actuator	-	14 m (46 ft)



DP-20 PLUS

Installation Instructions

4 Service

If you have any questions about one of our products or need to speak with a Customer Service representative, please use the contact information below.



GLOBAL HEADQUARTERS
AND AMERICAS
Tel +1.844.MAXCESS
Fax +1.360.834.5865
sales@maxcessintl.com
www.maxcessintl.com

EUROPE, MIDDLE EAST
AND AFRICA
Tel +49.6195.7002.0
Fax +49.6195.7002.933
sales@maxcess.eu
www.maxcess.eu

CHINA
Tel +86.756.881.9398
Fax +86.756.881.9393
info@maxcessintl.com.cn
www.maxcessintl.com.cn

INDIA
Tel +91.22.27602633
Fax +91.22.27602634
india@maxcessintl.com
www.maxcess.in

JAPAN
Tel +81.43.421.1622
Fax +81.43.421.2895
japan@maxcessintl.com
www.maxcess.jp

KOREA, TAIWAN,
AND SE ASIA
asia@maxcessintl.com
www.maxcess.asia

© 2020 Maxcess

