
FIFE CORPORATION Post Office Box 26508 Oklahoma City, Oklahoma 73126, U.S.A. Phone: (405) 755-1600 Fax: (405) 755-8425 Telex: 747276

INSTALLATION INSTRUCTIONS

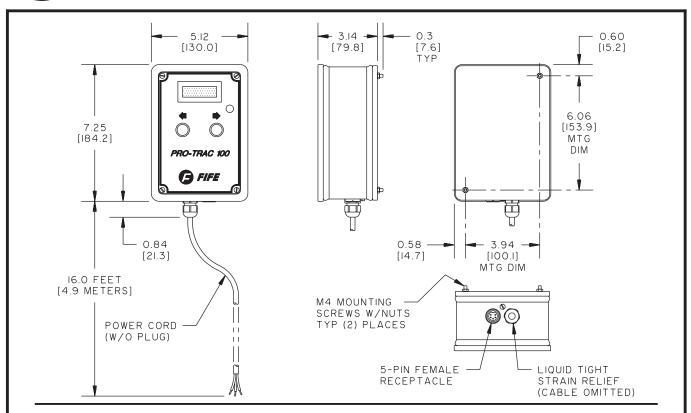

NOTES:

- 1. Dimensions shown in brackets [] are millimeters.
- Many features of the Pro-Trac 100 control station are field-selectable and can be changed to meet installation requirements. Located inside of the control panel assembly is a series of switches and jumpers used to configure the following items:
 - A. Supply Voltage.
 - B. Units of Measure.
 - C. Sensor Position Measurement (Web Width or Sensor Position).
 - D. Jog Polarity (Left or Right).
 - E. Display Polarity (Increase or Decrease).

TECHNICAL SPECIFICATIONS:

- 1. Power Required, 50/60 Hz:
 - 90-130 VAC or 180-230 VAC.
- 2. Fuse:

1/8 Amp Slo-Blo for 110 VAC.

1/16 Amp Slo-Blo for 230 VAC.

- 3. Output Charateristics: Inches or Millimeters.
- 4. Operating Temperature: 0 Deg C to +50 Deg C.
- 5. Linearity and Drift: + or 1% of Full Scale
- 6. Weight: 3.5 pounds
- 7. Protection Class: IP40