


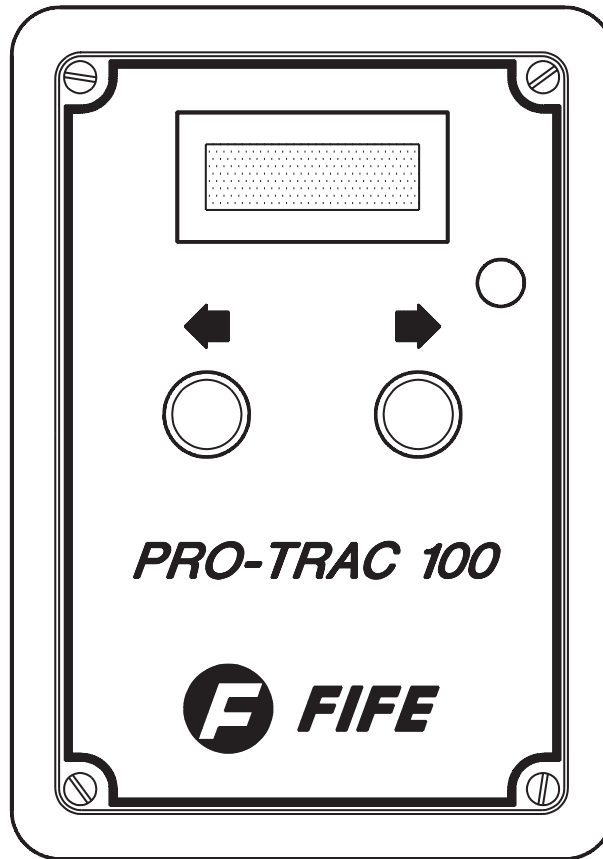

FIFE CORPORATION
Post Office Box 26508
Oklahoma City, Oklahoma 73126, U.S.A.
Phone: (405) 755-1600 Fax: (405) 755-8425
Telex: 747276

MAINTENANCE INSTRUCTIONS



The Pro-Trac 100 control station has been designed to provide years of trouble free service. If maintenance should be required, refer to Fife Control Box Assembly Drawing No. D-80360.



BEFORE PERFORMING ANY MAINTENANCE ON THE PRO-TRAC 100, DISCONNECT POWER FROM THE CONTROL BOX ASSEMBLY.

Controller Assembly

Remove the controller assembly from its mounting. Remove the two screws holding the assembly together. Note that the circuit board is attached to the enclosure top cover.

NOTE

Electrical maintenance should only be attempted by a qualified electrical technician.

Refer to Drawings D-79726 and D-79723 for electrical circuit information. These drawings are available from Fife Corporation, Oklahoma City, Oklahoma, Engineering Department. Refer to technical specification for fuse requirements.

