

FIFE CORPORATION Post Office Box 26508 Oklahoma City, Oklahoma 73126, U.S.A. Phone: (405) 755-1600 Fax: (405) 755-8425 Telex: 747276

## NOTES:

- 1. All dimensions in ( ) parentheses are in millimetes unless otherwise noted.
- Dimension ``A`' may vary due to the location of the support finger mounting block and the position of the support finger in the mounting block.
- 3. Only sensors with the 7/16-20 UNF or M12

(metric) mounting threads may be reverse mounted using Model M-7694 Mounting Bracket. Sensors with 9/16-18 UNF mounting thread can not be reverse mounted when using web support fingers.

4. For over all sensor dimensions see appropriate Figure Sheet in the Installation Section of the Maintenance Manual.



