

Perma-Tork[®] PB6 Instruction Manual

Copyright

All of the information herein is the exclusive proprietary property of Maxcess International, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed. Copyright 2004, all rights reserved. Periodically there will be updates to this manual. The latest version is available on our website or by calling the number on the back of this publication.

Handling

Handle and install with care. This is a precision-assembled unit with close internal clearances. Magnetic materials used are brittle by nature. **Avoid subjecting to shock loads. DO NOT DROP.**

Installation

Perma-Tork brake model PB6 is easily mounted to any permanent structure. Attach the brake to a frame using the bolt pattern as indicated.

Overhung Load Capacity

The brake must be protected from excessive overhung loads. When installing in an in-line application, use a flexible coupling to allow for misalignment. When installing in a parallel shaft application, do not apply side loads on the Perma-Tork shaft that exceed 10 lbs (measured at the midpoint of the shaft).



Model	PB6
Bolt size	(3) 10-24 x 3/8 in. deep
Bolt circle \varnothing	1.75 in.
Spacing	120°

Adjustment

For PB6 brake adjustment, simply loosen the wing nut and then adjust to the percentage of rated torque that is required. Re-tighten the wing nut to set the new torque level.

Maintenance

Properly installed, these units are designed to be maintenance free

Temperature range	Operation: 0 to 40° C [32 to 104° F]	Storage: -30 to 80° C [-22 to 176° F]	
Relative humidity	5 to 85 %		
Pollution degree	2 (IEC664–1)		
Altitude	0 to 2000 meters [6562 feet]		

Specifications



AMERICAS

Tel +1.405.755.1600 Fax +1.405.755.8425 sales@maxcessintl.com www.maxcessintl.com EUROPE, MIDDLE EAST AND AFRICA Tel +49.6195.7002.0 Fax +49.6195.7002.933 sales@maxcess.eu www.maxcess.eu

CHINA Tel +86.756.881.9398 Fax +86.756.881.9393 info@maxcessintl.com.cn www.maxcessintl.com.cn

INDIA Tel +91.22.27602633 Fax +91.22.27602634 india@maxcessintl.com www.maxcess.in

JAPAN Tel +81.43.421.1622 Fax +81.43.421.2895 japan@maxcessintl.com www.maxcess.jp KOREA, TAIWAN, AND SE ASIA asia@maxcessintl.com www.maxcess.asia