



SOFSTEP® Magnetic Particle Brake

Instruction Manual

24 VDC and 90 VDC Models: PSB2, PSB15, PSB70, PSB120 & PSB240

CAUTION: This product contains rotating parts which could cause injury at time of installation. Appropriate protective guards should be installed by the user according to his use of this product.

All of the information herein is the exclusive proprietary property of Maxcess International, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed.

Copyright 2004, all rights reserved.

Periodically there will be updates to this manual. The latest version is available on our website or by calling your regional office listed on the back page of this publication.

Theory of Operation

The **brake** construction consists of two stators, a rotor, a coil assembly, magnetic powder, and two bearings. The bearings support and align the rotor with the stators, and allow the rotor to rotate within the brake assembly. The magnetic powder occupies the space between the stators and the rotor disk, and represents the key element in the operation of the brake.

The stators are connected to the machine frame through a torque arm and remain stationary. The rotor is connected to a rotating machine shaft. The magnetic powder functions as the variable bond or link between the stators and the rotor. It is the medium for the transmission of torque.

An electric current in the coil creates a magnetic field (flux), which passes through the stators, magnetic powder, and the rotor disk. The flux aligns the powder particles, forming a bond or link between the stators and the rotor. The strength of the bonding action is proportional to the amount of current in the coil.

Mechanical Installation

Prior to installation, manually check the rotation of the rotor, and observe that it is smooth and free of binding or scraping.

PSB70, PSB120, PSB240

1. Mount the brake to the shaft.
NOTE: The rotor shaft centerline must be mounted within 30° of the horizontal plane.
2. Attach a torque arm between the extension bolt and the machine frame with a "loose" or "floating" mount to prevent binding forces on the brake bearings.

PSB2, PSB15

1. Unit can be rigidly mounted to frame with mounting holes provided.
2. For **indirect drive**, a sheave or sprocket can be mounted to the shaft.
For **direct drive**, a flexible coupling must be used to connect the brake shaft with machine shafts.

Electrical Installation

For 24 VDC devices, connect the two wires to the 24 VDC power source.

For 90 VDC devices, connect the two wires to the 90 VDC power source.

	PSB2		PSB15		PSB70		PSB120		PSB240	
Supply Voltage (VDC)	0-24	0-90	0-24	0-90	0-24	0-90	0-24	0-90	0-24	0-90
Maximum Current (ADC)	.37	.08	.54	.12	.50	.12	.85	.22	.56	.15

Environmental Specifications

Temperature Range:

Operating 0°C to 40°C

Storage -30° to +80°C

Relative Humidity: 5% to 85%

Pollution Degree: 2 (IEC664-1)

Altitude: 0 to 2000 m

Maintenance

These units require no scheduled maintenance.

The following units can be rebuilt at the factory: PSB70, PSB120 and PSB240.
Unit rebuild includes replacement of bearings, seals and magnetic powder.

The following units cannot be economically rebuilt: PSB2 and PSB15.



AMERICAS
Tel +1.405.755.1600
Fax +1.405.755.8425
sales@maxcessintl.com
www.maxcessintl.com

EUROPE, MIDDLE EAST
AND AFRICA
Tel +49.6195.7002.0
Fax +49.6195.7002.933
sales@maxcess.eu
www.maxcess.eu

CHINA
Tel +86.756.881.9398
Fax +86.756.881.9393
info@maxcessintl.com.cn
www.maxcessintl.com.cn

INDIA
Tel +91.22.27602633
Fax +91.22.27602634
india@maxcessintl.com
www.maxcess.in

JAPAN
Tel +81.43.421.1622
Fax +81.43.421.2895
japan@maxcessintl.com
www.maxcess.jp

KOREA, TAIWAN,
AND SE ASIA
asia@maxcessintl.com
www.maxcess.asia