

US-2/RAA

Ultrasonic Sensor/Right Angle Adapter

Copyright

All of the information herein is the exclusive proprietary property of Maxcess International, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed. Copyright 2004, all rights reserved. Periodically there will be updates to this manual. The latest version is available on our website or by calling the number on the back of this publication.

Introduction

The Model US-2 is an ultrasonic sensor that, when used with the VERSATEC[™] Tension Control, provides non-contact distance measurement.

Mechanical installation

If two or more sensors are mounted in the same area, care must be taken to avoid ultrasonic reflections from one sensor to the other.

Insert the body of the US-2 through a 30 mm (1.18 inch) diameter hole in a machine frame or mounting bracket. Secure with the two locknuts provided. The sensor is aligned with the target when a distance value is displayed on the VERSATEC screen. If the US-2 is not aligned with the target the display will read ****.

If using the RAA, install locknut, and then screw adapter all the way onto the US-2 and secure with locknut. Rotate the US-2 in its mounting to align to the target. The RAA adds 25.4 mm [1 inch] to the sonic path length.

Electrical installation

Connect the leadwires from the US-2 to the VERSATEC terminal block TB2. Observe the color coding indicated on the label of the control. Connect the cable shield wire to the ground screw.

Maintenance

Due to the sealed design of the US-2, there is no maintenance required, other than keeping the white face of the sensor clear of any debris.

Specifications

Enclosure rating	IP65(EN60529)
Climatic class	3K3(EN60721)
Temperature range	
Operating	0°C to 40°C [32 to 104° F]
Storage	-30°C to 80°C [-22 to 176° F]
Relative humidity	5 to 85 %
Pollution degree	2 (IEC664–1)
Altitude	0 to 2000 meters [6562 feet]

Dimensions







AMERICAS

Tel +1.405.755.1600 Fax +1.405.755.8425 sales@maxcessintl.com www.maxcessintl.com EUROPE, MIDDLE EAST AND AFRICA Tel +49.6195.7002.0 Fax +49.6195.7002.933 sales@maxcess.eu www.maxcess.eu

CHINA Tel +86.756.881.9398 Fax +86.756.881.9393 info@maxcessintl.com.cn www.maxcessintl.com.cn INDIA Tel +91.22.27602633 Fax +91.22.27602634 india@maxcessintl.com www.maxcess.in

JAPAN Tel +81.43.421.1622 Fax +81.43.421.2895 japan@maxcessintl.com www.maxcess.jp KOREA, TAIWAN, AND SE ASIA asia@maxcessintl.com www.maxcess.asia